

## **USB Card Readers**

CR20E



• Read 125K proximity card number, USB interface

CR20M



CR20MW



• Read 13.56MHz mifare card number, USB interface • Read and write 13.56MHz mifare card, USB interface

CR10F



• Read 125K proximity card number, USB interface

CR10M



CR10MW



• Read 13.56MHz mifare card number, USB interface • Read and write 13.56MHz mifare card, USB interface



